



# JumboSwitch® LED Troubleshooting Guide

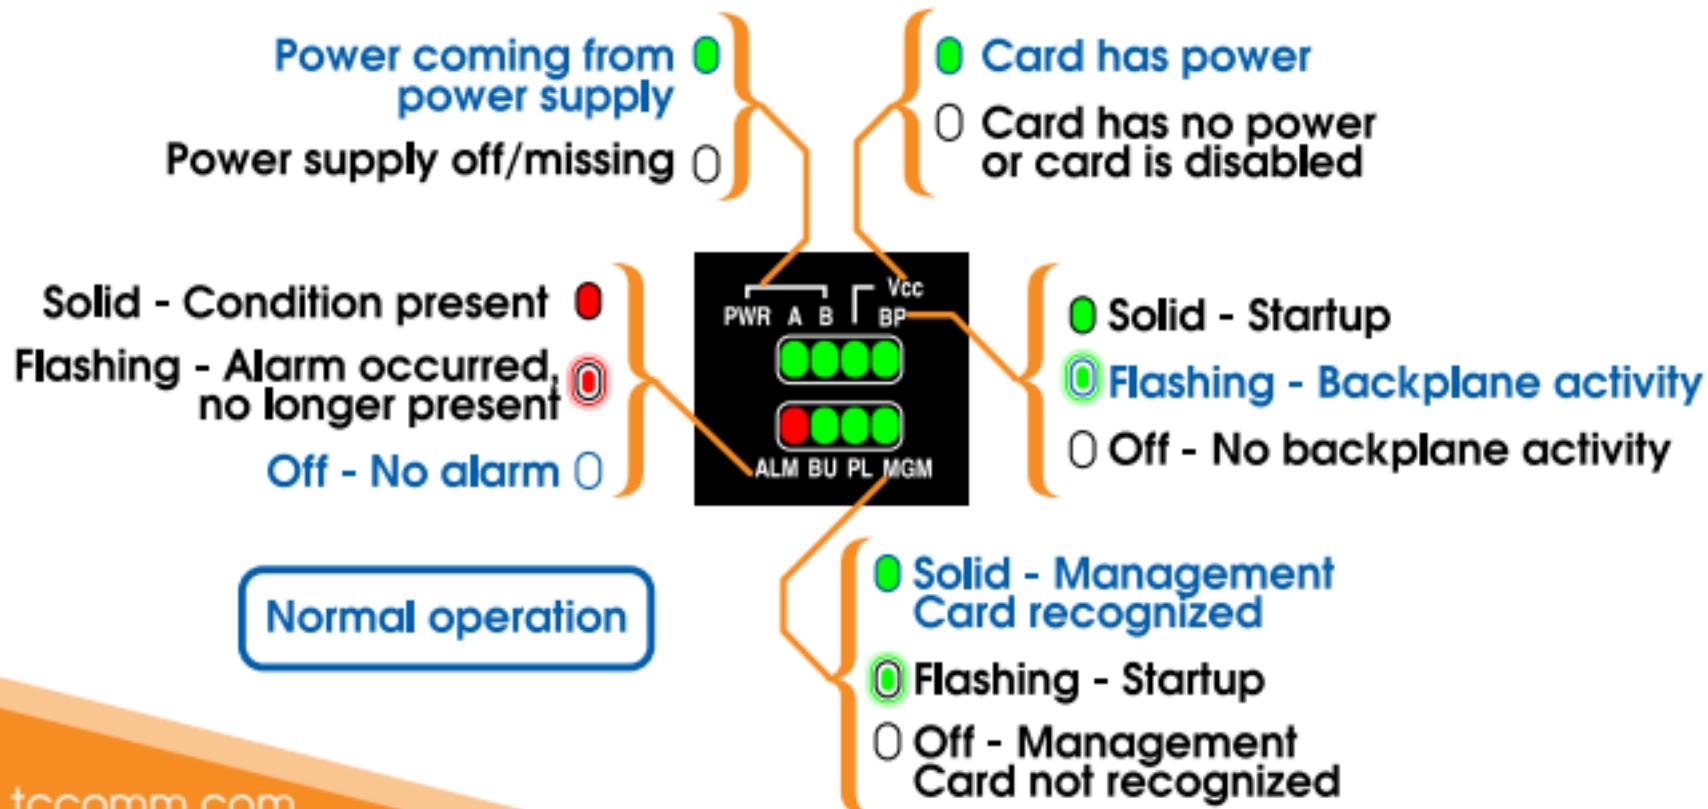

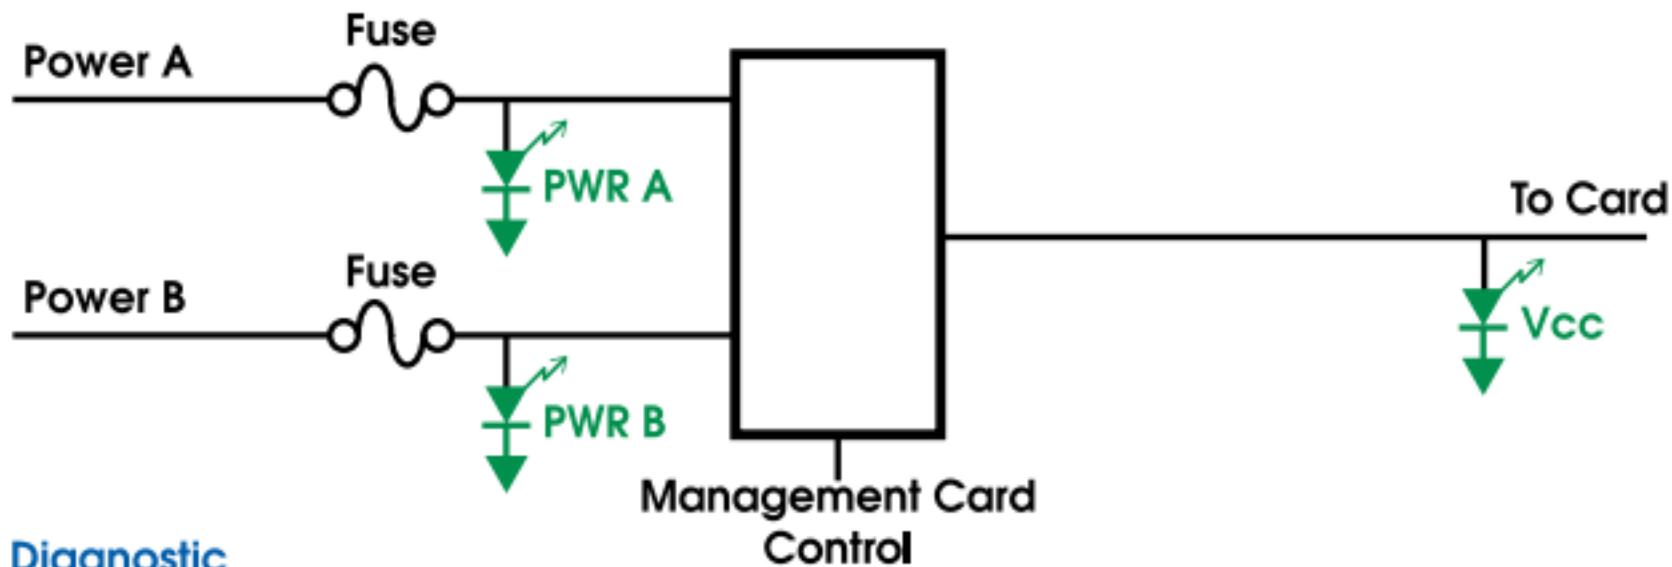

## Diagnostic

### PWR A/B Not On

- Power supply off or not present
- Fuse blown

### VCC Not On

- Card disabled by MGMT Card
- Card fault